


Lovibond® Water Testing

Tintometer® Group

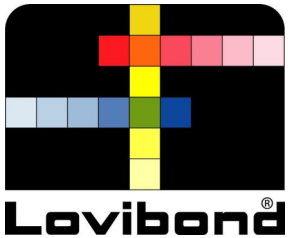

5in1

The fast assistants for Pool Testing



- Easy to use
- Futuristic design
- RAPID tablets fast dissolving
- Highest accuracy

Part Number: 151900

High measuring accuracy

Results are shown with high measurement accuracy. They have a certainty and can counteract if necessary.

Intuitive

Self-explanatory is the operation of the tester. And if you are ever unsure:
A look at the packaging and the intuitively understandable instructions are sufficient to eliminate the ambiguity.

Ergo mixed

The ergonomically optimized lid ensures a secure grip.

Industry

Pool Domestic | Pool Services

Application

Disaster Management | Pool Water Control

5in1

Water care is a must, even for the smallest pool. No pool owner can get a reliable overview of whether the pH value and chlorine content in their water paradise are in order more easily and quickly than with the pooltester from Lovibond®. Simply immerse the water tester or fill a water sample into the chambers, add a fast-dissolving test tablet and see with your own eyes where there is a need for action. The water changes colour and the comparison scale makes it easy to read off the values. From pH to chlorine, bromine, active oxygen to copper and calcium hardness, the pooltester offers all the important parameters that every pool owner needs to keep an eye on, depending on the version.

Measuring Range

Test Name	Measuring Range
Alkalinity-m	20 mg/L CaCO_3
Calcium hardness	20 - 800 mg/L CaCO_3
Chlorine	0.1 - 3.0 mg/L Cl_2
Cyanuric acid	20 - 200 mg/L CyA
pH	6.8 - 8.2 pH

Delivery Scope

- Pooltester Chlorine - pH LR in a robust plastic case
- Cyanuric acid tube
- Dilution / shaker tube (100 ml)
- Dilution / shaker tube (30 ml)
- Cleaning brush
- Stirring rod
- 20 tablet reagents each DPD No. 1 Rapid, DPD No. 3 Rapid, Phenolred Rapid
- 10 tablet reagents each CyA-Test, Alk-Test, CAL-Test
- Instruction manual

Tintometer GmbH

Lovibond® Water Testing
Schleefstraße 8-12
44287 Dortmund
Tel.: +49 (0)231/94510-0
sales@lovibond.com
www.lovibond.com
Germany

The Tintometer Limited

Lovibond House
Sun Rise Way
Amesbury, SP4 7GR
Tel.: +44 (0)1980 664800
sales@lovibond.uk
www.lovibond.com
UK

Tintometer China

9F, SOHO II C.
No.9 Guanghualu,
Chaoyang District,
Beijing, 100020
Customer Care: +86 021 69910081
Tel.: +86 10 85251111 Ext. 330
Fax: +86 10 85251001
chinaoffice@tintometer.com
www.lovibond.com
China

Tintometer South East Asia

Unit B-3-12, BBT One Boulevard,
Lebuh Nilam 2, Bandar Bukit Tinggi,
Klang, 41200, Selangor D.E
Tel.: +60 (0)3 3325 2285/6
Fax: +60 (0)3 3325 2287
lovibond.asia@tintometer.com
www.lovibond.com
Malaysia

Tintometer Brazil

Caixa Postal: 271
CEP: 13201-970
Jundiaí – SP
Tel.: +55 (11) 3230-6410
sales@lovibond.us
www.lovibond.com.br
Brazil

Tintometer Inc.

6456 Parkland Drive
Sarasota, FL 34243
Tel: 941.756.6410
Fax: 941.727.9654
sales@lovibond.us
www.lovibond.us
USA

Tintometer India Pvt. Ltd.

Door No: 7-2-C-14, 2nd, 3rd & 4th Floor
Sanathnagar Industrial Estate,
Hyderabad, 500018
Telangana
Tel: +91 (0) 40 23883300
Toll Free: 1 800 599 3891/ 3892
indiaoffice@lovibond.in
www.lovibondwater.in
India

Tintometer Spain

Postbox: 24047
08080 Barcelona
Tel.: +34 661 606 770
sales@tintometer.es
www.lovibond.com
Spain

Technical changes without notice

Printed in Germany

Lovibond® and Tintometer® are Trademarks of the Tintometer Group of Companies